

# Filter Element Replacement Instructions


## Note:

Only use genuine Separ filter elements.

Prior to servicing the filters, ensure that the unit is OFF.

### Step 1

Shut off the fuel supply valve and isolate unit before servicing the filter. Locate the lid bolts, which are either wing bolts or hex bolts.

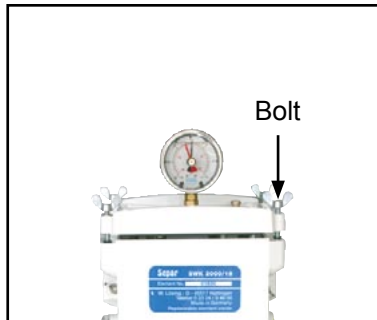

### Step 2

Unscrew the lid bolts evenly.



### Step 3

Remove the lid with the lid gasket.



### Step 4

Take out the spring frame.



### Step 5

Lift out filter element by the handle. Replace with new filter element and re-fit the spring frame.



### Step 6

Inspect lid gasket. Replace if necessary.



### Step 7

Fit lid checking for correct positioning. Evenly tighten in the sequence shown.



### Step 8

Open the fuel supply valve, prime fuel system and check for leaks.

